

HOW TO MEASURE STEERING CABLES "MEASURE TWICE. ORDER ONCE."

REPLACEMENT OF EXISTING CABLE:

If possible, find the part number stamped on the plastic jacket of the old cable. If you removed the old cable, measure for the replacement cable as follows:



For Rotary Steering Cable Replacement, Measure Existing Cable as follows: Measure plastic cable jacket ("Y" dimension, shown in above drawing) in inches, add 18", and round up to the next foot. Order that length cable.

For Rack Steering Cable Replacement, Measure Existing Cable as follows: Measure plastic cable jacket

("Y" dimension shown in above drawing) in inches, add 30", and round up to the next foot. Order that length cable.

NEW INSTALLATION:


Measure cable routing path from wheel center line to engine connection, as follows:

- A = Center line of wheel to gunwale (or deck, if routed downward),
- B = Dash to transom,
- C = Gunwale to centerline of cable connection at centered tiller.

For Cable Installations through the Engine Tilt Tube: Add A, B & C + 6", and round up to the next foot. Order that length cable.


For Cables Mounted to Transom, Splashwell or Stringer: Add A, B & C, then subtract 6" and round up to the next foot. Order that length cable.

TYPICAL SINGLE STATION ROUTING

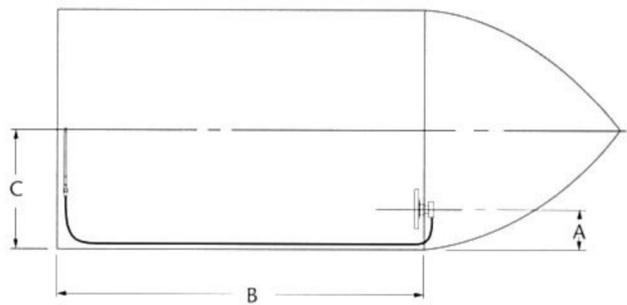


A single-cable, starboard drive push-pull mechanical cable system is shown in this diagram. If your mechanical system is different than the one depicted and/or you have any questions about mechanical steering after reviewing this guide, please contact us for assistance.


Cable routings (such as those found on pontoon boats) may vary from this drawing. Confirm length by laying a garden hose (or similar object) along cable path and measure run from wheel to engine connection point.

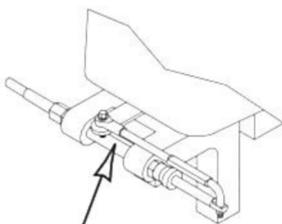

CABLE THROUGH ENGINE TILT TUBE

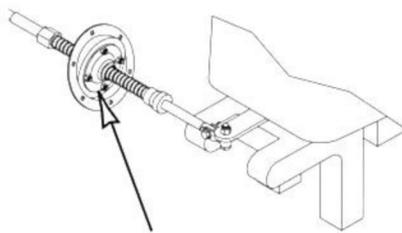

SPLASHWELL CABLE MOUNT

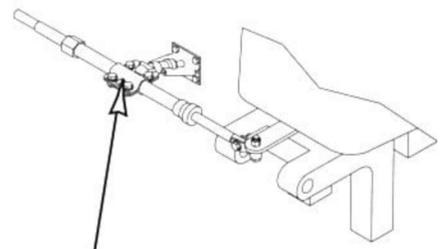

TRANSOM CABLE MOUNT (similar to stringer type)